

About the TRACE32 Online Help

History

- 15-Apr-2024 Removed manual: 'DigRF Protocol Analyzer' (digrf_app.pdf).
- 29-Mar-2024 The Manual 'Arm JTAG Interface Specifications' (app_arm_jtag.pdf) has been replaced by an updated manual entitled '[Arm Debug and Trace Interface Specification](#)' (app_arm_target_interface.pdf).
- 22-Mar-2024 Removed Monitor manuals.
- 30-Jun-2023 New manual: '[Application Note Profiling on AUTOSAR CP with ARTI](#)' (app_autosar_cp_arti.pdf).
- 12-Jun-2023 The 'TRACE32 Glossary' (glossary.pdf) manual has been split into two manuals: '[TRACE32 Terminology](#)' (trace32_terms.pdf) and '[TRACE32 Concepts](#)' (trace32_concepts.pdf).
- 12-Jun-2023 Removed manual: 'OS Awareness Manual RTOS/7700' (rtos_rt7700.pdf).
- 24-May-2023 Manual file renamed from 'Training Source Level Debugging' (training_hll.pdf) to '[Training Source Level Debugging](#)' (training_source_level_debugging.pdf).
- 16-Dec-2022 Manual renamed from 'Training JTAG Interface' (training_jtag.pdf) to '[Application Note JTAG Interface](#)' (app_jtag_interface.pdf).
- 08-Jun-2022 New manual: '[Application Note for Complex Trigger Language](#)' (app_ctl.pdf).
- 01-May-2022 Manual renamed from 'ICD Tutorial' (icd_tutorial.pdf) to '[Debugger Tutorial](#)' (debugger_tutorial.pdf).
- 31-Jan-2022 Removed manuals: 'TRACE32 JTAG Bridge for Android' (android_jtag_bridge.pdf) and 'List of Supported FLASH Devices' (flashlist.pdf).
- 17-Jan-2022 New manual: '[Application Note for eMMC Analysis](#)' (app_analyze_emmc.pdf).
- 20-Dec-2021 Removed manual: 'VM Debugger Dalvik (vmdalvik.pdf)'.
- 11-Nov-2021 New manual: '[Application Note for iAMP Debugging](#)' (app_iamp.pdf).

Structure and Contents of the Documentation

This chapter describes the structure of the TRACE32 documentation.

The release history in the documentation always lists the latest changes in the TRACE32 software. When you get a new version of the TRACE32 software, please always check the [Release history](#) first.

Online Documentation

There are several ways to get access to the documentation:

1. If the TRACE32 software is already running, you can use the **Help** command in the main menu bar.
2. On the TRACE32 software DVD and in your TRACE32 system path (e.g. `C:\T32`), you can find a directory **pdf**. This directory contains the complete TRACE32 documentation in PDF format.

Open **directory.pdf** to get the table of contents for the complete TRACE32 documentation.

Documentation on how to use the online help can be found in chapter [Help System](#).

The documentation is *automatically* filtered by your currently used hardware and/or software configuration. The filter automatically reduces the whole documentation to the part that is relevant for you. If you want to change the filter, take a look at the command [HELP.FILTER](#).

In-Circuit Debugger TRACE32-ICD

TRACE32-ICD includes all debuggers based on an on-chip debug interface (e.g. JTAG, BMD, OCDS ...) as well as ROM monitor solutions. Lauterbach also provides a trace extension for most debuggers (TRACE32-ICT). TRACE32-ICD comes with a number of manuals that should make you familiar with important features of TRACE32-ICD.

Manuals to help you get started:

- **“Debugger Tutorial”** ([debugger_tutorial.pdf](#))
A guided tour through the TRACE32 graphical user interface (GUI) called TRACE32 PowerView. We use a simple program example in C to illustrate the most important debug features and give lots of helpful tips & tricks for everyday use.
- **“Training Basic Debugging”** ([training_debugger.pdf](#)) - An introduction to debugging with TRACE32
- **“Training Basic SMP Debugging”** ([training_debugger_smp.pdf](#)) - An introduction to SMP debugging
- **“Training Script Language PRACTICE”** ([training_practice.pdf](#)) - An introduction to PRACTICE, the scripting language for TRACE32

Sources of information beyond the PDF files of the TRACE32 online help:

- <https://support.lauterbach.com/downloads/files/practice-reference-card-pdf-2> - Reference Card for the most common commands of the PRACTICE scripting language
- https://www.lauterbach.com/publications/debugging_amp_smp_systems.pdf - An introduction to asymmetrical and symmetrical multiprocessing (AMP/SMP)
- <https://www.youtube.com/user/lauterbachgmbh> - A variety of tutorials on the Lauterbach YouTube channel

For more information on the features of TRACE32-ICD, refer to the following parts of the TRACE32 online help:

- **“TRACE32 Installation Guide”** ([installation.pdf](#))
This part is the general installation guide for all TRACE32 development tools.
- **“ICD In-Circuit Debugger”**
This part provides all CPU specific information for your TRACE32-ICD, chiefly how to set up the debugger for your target. Here you will also find all extra features that are supported for your CPU.
- **“General Reference Guide”** ([general_ref_<x>.pdf](#))
This part provides an alphabetical list of all debugger commands.
- **“TRACE32 Functions Reference”** ([<x>_func.pdf](#))
Refer to this part for information about the TRACE32 PRACTICE functions.

- **“PowerView User’s Guide” (ide_user.pdf)**
All TRACE32 development tools share the common user interface TRACE32 PowerView. This part describes the basic functions of the user interface (command structure, online help, editing and managing files, printer operations, etc.)
- **“PowerView Command Reference” (ide_ref.pdf)**
This part provides an alphabetical list of all TRACE32 PowerView commands.
- **“PRACTICE Script Language User’s Guide” (practice_user.pdf)**
The TRACE32 script language PRACTICE is mainly used to perform automatic setups, to automate test sequences or to store the system settings for later recall. This part describes the basic structure and features of PRACTICE.
- **“PRACTICE Script Language Reference Guide” (practice_ref.pdf)**
This part provides an alphabetical list of all PRACTICE commands.
- **“OS Awareness Manuals” (rtos_<os>.pdf)**
Refer to this part if you want to use the TRACE32 OS Awarenesses (= RTOS Debuggers in previous TRACE32 releases).
- **“3rd-Party Tool Integrations” (int_<x>.pdf)**
Refer to this part, if you want to run TRACE32-ICD from a 3rd-party user interface.

- About the TRACE32 Online Help (main.pdf)
- TRACE32 Terminology (trace32_terms.pdf)
- TRACE32 Debugger Getting Started
 - T32Start (app_t32start.pdf)
 - Establish Your Debug Session (tutor_setup.pdf)
 - Debugger Tutorial (debugger_tutorial.pdf)
 - Trace Tutorial (trace_tutorial.pdf)
- TRACE32 Documents
 - TRACE32 Concepts (trace32_concepts.pdf)
 - PowerView User Interface
 - PowerView User's Guide (ide_user.pdf)
 - PowerView Command Reference (ide_ref.pdf)
 - PRACTICE Script Language
 - PRACTICE Script Language User's Guide (practice_user.pdf)
 - PRACTICE Script Language Reference Guide (practice_ref.pdf)
 - TRACE32 Functions
 - PowerView Function Reference (ide_func.pdf)
 - General Function Reference (general_func.pdf)
 - Stimuli Generator Function Reference (stg_func.pdf)
 - Application Notes for PRACTICE
 - Converter from GEL to PRACTICE (converter_gel.pdf)
- General Commands
 - General Commands Reference Guide A (general_ref_a.pdf)
 - General Commands Reference Guide B (general_ref_b.pdf)
 - General Commands Reference Guide C (general_ref_c.pdf)
 - General Commands Reference Guide D (general_ref_d.pdf)
 - General Commands Reference Guide E (general_ref_e.pdf)
 - General Commands Reference Guide F (general_ref_f.pdf)
 - General Commands Reference Guide G (general_ref_g.pdf)
 - General Commands Reference Guide H (general_ref_h.pdf)

General Commands Reference Guide I	(general_ref_i.pdf)
General Commands Reference Guide J	(general_ref_j.pdf)
General Commands Reference Guide K	(general_ref_k.pdf)
General Commands Reference Guide L	(general_ref_l.pdf)
General Commands Reference Guide M	(general_ref_m.pdf)
General Commands Reference Guide N	(general_ref_n.pdf)
General Commands Reference Guide O	(general_ref_o.pdf)
General Commands Reference Guide P	(general_ref_p.pdf)
General Commands Reference Guide Q	(general_ref_q.pdf)
General Commands Reference Guide R	(general_ref_r.pdf)
General Commands Reference Guide S	(general_ref_s.pdf)
General Commands Reference Guide T	(general_ref_t.pdf)
General Commands Reference Guide U	(general_ref_u.pdf)
General Commands Reference Guide V	(general_ref_v.pdf)
General Commands Reference Guide W	(general_ref_w.pdf)
General Commands Reference Guide X	(general_ref_x.pdf)
General Commands Reference Guide Y	(general_ref_y.pdf)
General Commands Reference Guide Z	(general_ref_z.pdf)

Source Level Debugging

Application Note C++ Debugging	(app_cpp_debugging.pdf)
--------------------------------------	-------------------------

Multicore Debugging

Application Note for iAMP Debugging	(app_iamp.pdf)
---	----------------

FLASH Programming

Onchip/NOR FLASH Programming User's Guide	(norflash.pdf)
NAND FLASH Programming User's Guide	(nandflash.pdf)
Serial FLASH Programming User's Guide	(serialflash.pdf)
eMMC FLASH Programming User's Guide	(emmcflash.pdf)

Application Notes for FLASH

How to Write your own FLASH Algorithm	(flash_app_own_algorithm.pdf)
Tips to Solve NOR FLASH Programming Problems	(flash_diagnosis.pdf)
How to Write your own FLASHFILE Algorithm	(flashfile_app_own_algorithm.pdf)

JTAG

Application Note JTAG Interface	(app_jtag_interface.pdf)
---------------------------------------	--------------------------

Boundary Scan

Boundary Scan User's Guide (boundary_scan.pdf)

TRACE32 Lua Library

TRACE32 Lua Library(lua_library.pdf)

Intel® DCI [Direct Connect Interface]

Debugging via Intel® DCI User's Guide(dci_intel_user.pdf)

Peripheral Files

Peripheral Files Programming (per_prog.pdf)

Converter SPIRIT XML to PER Commands (converter_spiritxml.pdf)

Complex Trigger Language

Application Note for Complex Trigger Language (app_ctl.pdf)

Trace Application Notes

Trace Analysis

Application Note for Trace.DRAW (app_trace_draw.pdf)

Application Note for Trace.Find (app_trace_find.pdf)

Application Note for Trace.List(app_trace_list.pdf)

Application Note for eMMC Analysis (app_analyze_emmc.pdf)

Application Note Profiling on AUTOSAR CP with ARTI(app_autosar_cp_arti.pdf)

Software Traces

Application Note for FDX (app_fdx.pdf)

Application Note for the SNOOPER Trace (app_snooper.pdf)

Application Note for the LOGGER Trace (app_logger.pdf)

Code Coverage

Application Note for t32cast (app_t32cast.pdf)

Application Note for Trace-Based Code Coverage (app_code_coverage.pdf)

AutoFocus User's Guide (autofocus_user.pdf)

PowerTrace Serial User's Guide (serialtrace_user.pdf)

System Trace User's Guide(trace_stm.pdf)

Bootloader Awareness Manuals

Bootloader Awareness Manual coreboot(boot_coreboot.pdf)

Bootloader Awareness Manual GRUB(boot_grub.pdf)

UEFI Awareness Manuals

UEFI Awareness Manual BLDK (uefi_bldk.pdf)

UEFI Awareness Manual H2O	(uefi_h2o.pdf)
UEFI Awareness Manual TianoCore	(uefi_tiano.pdf)
OS Awareness Manuals	
OS Awareness Manual AMX	(rtos_amx.pdf)
OS Awareness Manuals for ARTI	
Application Note Profiling on AUTOSAR CP with ARTI	(app_autosar_cp_arti.pdf)
OS Awareness Manual Atomthreads	(rtos_atomthreads.pdf)
OS Awareness Manual ARTX-166	(rtos_rtxartx166.pdf)
OS Awareness Manual ChibiOS/RT	(rtos_chibios.pdf)
OS Awareness Manual Cmicro	(rtos_cmicro.pdf)
OS Awareness Manual CMX	(rtos_cmx.pdf)
OS Awareness Manual DSP/BIOS	(rtos_bios.pdf)
OS Awareness Manual eCos	(rtos_ecos.pdf)
OS Awareness Manual embOS	(rtos_embos.pdf)
OS Awareness Manual FAMOS	(rtos_famos.pdf)
OS Awareness Manual FreeRTOS	(rtos_freertos.pdf)
OS Awareness and Run Mode Debugging for Linux	
Run Mode Debugging Manual Linux	(rtos_linux_run.pdf)
OS Awareness Manual Linux	(rtos_linux_stop.pdf)
Training Linux Debugging	(training_rtos_linux.pdf)
OS Awareness Manual LiteOS	(rtos_liteos.pdf)
OS Awareness Manual LynxOS	(rtos_lynx.pdf)
OS Awareness Manual MicroC/OS-II	(rtos_ucos.pdf)
OS Awareness Manual MicroC/OS-III	(rtos_ucos3.pdf)
OS Awareness Manual MicroC3/Compact	(rtos_uc3cmp.pdf)
OS Awareness Manual MicroC3/Standard	(rtos_uc3std.pdf)
OS Awareness Manual MQX	(rtos_mqx.pdf)
OS Awareness Manual MTOS-UX	(rtos_mtos.pdf)
OS Awareness Manual NetBSD	(rtos_netbsd.pdf)
OS Awareness Manual NORTi	(rtos_norti.pdf)
OS Awareness Manual Nucleus PLUS	(rtos_nucleus.pdf)
OS Awareness Manual NuttX	(rtos_nuttX.pdf)
OS Awareness Manual OKL4	(rtos_okl4.pdf)

OS Awareness Manual OS21	(rtos_os21.pdf)
OS Awareness Manual OS-9	(rtos_os9.pdf)
OS Awareness Manual OSE Delta	(rtos_ose_delta.pdf)
OS Awareness Manual OSE Epsilon	(rtos_ose_epsilon.pdf)
OS Awareness Manual OSEck	(rtos_oseck.pdf)
OS Awareness for OSEK/ORTI	
OS Awareness Manual OSEK/ORTI	(rtos_orti.pdf)
Application Note for OSEK/ORTI	
Trace Export for Third-Party Timing Tools	(app_timing_tools.pdf)
OS Awareness Manual PikeOS	(rtos_pikeos.pdf)
OS Awareness Manual PrKERNEL	(rtos_prkernel.pdf)
OS Awareness Manual pSOS+	(rtos_psos.pdf)
OS Awareness Manual PXROS	(rtos_pxros.pdf)
OS Awareness and Run Mode Debugging for QNX	
Run Mode Debugging Manual QNX	(rtos_qnx_run.pdf)
OS Awareness Manual QNX	(rtos_qnx_stop.pdf)
OS Awareness Manual QXK	(rtos_qxk.pdf)
OS Awareness Manual REALOS	(rtos_realos.pdf)
OS Awareness Manual RealTimeCraft	(rtos_realtimecraft.pdf)
OS Awareness Manual RIOT	(rtos_riot.pdf)
OS Awareness Manual RTEMS	(rtos_rtems.pdf)
OS Awareness Manual RTX-ARM	(rtos_rtxarm.pdf)
OS Awareness Manual RTXC Quadros	(rtos_quadros.pdf)
OS Awareness Manual Rubus OS	(rtos_rubus.pdf)
OS Awareness Manual Sciopta	(rtos_sciopta.pdf)
OS Awareness Manual SMX	(rtos_smx.pdf)
OS Awareness Manual SYS/BIOS	(rtos_sysbios.pdf)
OS Awareness Manual ThreadX	(rtos_threadx.pdf)
OS Awareness Manual uClinux	(rtos_uclinux.pdf)
OS Awareness Manual uiPLUS	(rtos_uiplus.pdf)
OS Awareness Manual VDK	(rtos_vdk.pdf)
OS Awareness Manual VxWorks	(rtos_vxworks.pdf)
OS Awareness Manuals for Windows	

OS Awareness Manual Windows CE4/CE5	(rtos_windows_ce.pdf)
OS Awareness Manual Windows CE6/EC7/EC20	(rtos_windows_ce6.pdf)
OS Awareness Manual Windows Standard	(rtos_windows.pdf)
OS Awareness Manual XOS	(rtos_xos.pdf)
OS Awareness Manual Zephyr	(rtos_zephyr.pdf)
Hypervisor Debugging	
Hypervisor Debugging User Guide	(hypervisor_user.pdf)
Hypervisor Awareness Manuals	
Hypervisor Awareness Manual Wind River Hypervisor	(hv_windriver.pdf)
GDB Support	
TRACE32 as GDB Front-End	(frontend_gdb.pdf)
TRACE32 as GDB Back-End	(backend_gdb.pdf)
Converter from GDB to PRACTICE	(converter_gdb.pdf)
Virtual Targets	
Virtual Targets User's Guide	(virtual_targets.pdf)
Debug Back-Ends	
TRACE32 Debug Back-Ends	(backend_overview.pdf)
CSWP Debug Back-End	(backend_cswp.pdf)
GTL Debug Back-End	(backend_gtl.pdf)
Sneakpeek Debug Back-End	(backend_sneakpeek.pdf)
Debugging via USB User's Guide	(usbdebug_user.pdf)
Verilog Debug Back-End	(backend_verilog.pdf)
XCP Debug Back-End	(backend_xcp.pdf)
Native Process Debugger	(windows_debugger.pdf)
TRACE32 as TCF Agent	(app_tcf_setup.pdf)
3rd-Party Tool Integrations	
Integration for CodeBlocks	(int_codeblock.pdf)
Integration for EasyCase	(int_easycase.pdf)
Integration for eXDI2 on Windows CE Platform Builder	(int_exdi2.pdf)
Integration with LabView	(int_labview.pdf)
Integration for Rhapsody in C/C++	(int_rhapsody_cpp.pdf)
Integration for Rhapsody in MicroC	(int_rhapsody_mc.pdf)
Integration for Simulink	(int_simulink.pdf)

Integration for Xilinx ISE	(int_ise.pdf)
Integration for Xilinx Vivado	(int_vivado.pdf)
Integration for X-Tools and X32	(int_xtools.pdf)

TRACE32 Instruction Set Simulators

API for TRACE32 Instruction Set Simulator	(simulator_api.pdf)
Simulator for 68K/ColdFire	(simulator_68k.pdf)
Simulator for ARC	(simulator_arc.pdf)
Simulator for Arm and XSCALE	(simulator_arm.pdf)
Simulator for C166/ST10	(simulator_c166.pdf)
Simulator for H8/300, H8/300H and H8S	(simulator_h8.pdf)
Simulator for HC08/MSC08	(simulator_hc08.pdf)
Simulator for HC12/MCS12	(simulator_hc12.pdf)
Simulator for Intel® x86/x64	(simulator_x86.pdf)
Simulator for MIPS	(simulator_mips.pdf)
Simulator for NIOS-II	(simulator_nios.pdf)
Simulator for PowerPC	(simulator_ppc.pdf)
Simulator for SuperH	(simulator_sh.pdf)
Simulator for TriCore	(simulator_tricore.pdf)
Simulator for V850	(simulator_v850.pdf)
Simulator for XTENSA	(simulator_xtensa.pdf)
Simulator for Z80+	(simulator_z80.pdf)

ICD In-Circuit Debugger

ICD Add-Ons

EPROM/FLASH Simulator	(eprom_simulator.pdf)
TPU Debugger	(tpu.pdf)

Processor Architecture Manuals

78K

78K0R/RL78 Debugger	(debugger_78k.pdf)
---------------------------	--------------------

Andes

Andes Debugger	(debugger_andes.pdf)
----------------------	----------------------

APEX

APEX Debugger	(debugger_apex.pdf)
---------------------	---------------------

APS

APS Debugger	(debugger_aps.pdf)
ARC	
ARC Debugger and Trace	(debugger_arc.pdf)
Arm/CORTEX/XSCALE	
Arm Debugger	(debugger_arm.pdf)
Armv8 and Armv9 Debugger	(debugger_armv8v9.pdf)
Cortex-M Debugger	(debugger_cortexm.pdf)
CombiProbe for Cortex-M User's Guide	(combiprobe_cortexm.pdf)
MicroTrace for Cortex-M User's Guide	(microtrace_cortexm.pdf)
Arm ETM Trace	(trace_arm_etm.pdf)
Training Arm CoreSight ETM Tracing	(training_arm_etm.pdf)
Training Cortex-M Tracing	(training_cortexm_etm.pdf)
Arm ETM Programming Dialog	(trace_arm_etm_dialog.pdf)
RAM Trace Port	(trace_rtp.pdf)
Arm Application Notes	
Arm Debug and Trace Interface Specification	(app_arm_target_interface.pdf)
Setup of the Debugger for a CoreSight System	(app_arm_coresight.pdf)
Debugging Embedded Cores in Xilinx FPGAs [Zynq]	(app_xilinx_zynq.pdf)
Arm Application Note for MXC Chips	(app_arm_mxc.pdf)
AVR32	
AVR32 Debugger and NEXUS Trace	(debugger_avr32.pdf)
AVR8	
AVR8 Debugger	(debugger_avr8.pdf)
Beyond	
Beyond Debugger and Trace	(debugger_beyond.pdf)
Blackfin	
Blackfin Debugger	(debugger_blackfin.pdf)
C166 Family	
XC2000/XC16x/C166CBC Debugger	(debugger_166cbc.pdf)
XC16x Application Notes	
Application Note Debug Cable C166	(c166_app_ocds.pdf)
CEVA-Oak/Teak/TeakLite	
CEVA-Oak/Teak/TeakLite Debugger and Trace	(debugger_oak.pdf)

CEVA-X

CEVA-X Debugger and Trace (debugger_cevax.pdf)

CPU32 and ColdFire

CPU32/ColdFire Debugger and Trace (debugger_68k.pdf)

DSP56K

DSP56K Debugger (debugger_56000.pdf)

dsPIC33

dsPIC33 Debugger (debugger_pic.pdf)

eSi-RISC

Debugger for eSi-RISC (debugger_esir.pdf)

eTPU

eTPU Debugger and Trace (debugger_etpu.pdf)

GTM

GTM Debugger and Trace (debugger_gtm.pdf)

H8S

H8S/23x9 Debugger (debugger_h8s.pdf)

Hexagon

Hexagon Debugger (debugger_hexagon.pdf)

Hexagon-ETM Trace (trace_hexagon_etm.pdf)

IPU

IPU Debugger (debugger_ipu.pdf)

M32R

M32R Debugger and Trace (debugger_m32r.pdf)

M8051EW

M8051EW Debugger (debugger_m8051ew.pdf)

8051XC

R8051XC Debugger (debugger_r8051xc.pdf)

MAC71xx/72xx

MAC71xx/72xx NEXUS Debugger and Trace (nexus_mac.pdf)

MCS08

MCS08 Debugger (debugger_hc08.pdf)

MCS12

MCS12 Debugger (debugger_hc12.pdf)

Meta

Meta Debugger(debugger_meta.pdf)

Mico32

Mico32 Debugger(debugger_mico32.pdf)

MicroBlaze

MicroBlaze Debugger and Trace(debugger_microblaze.pdf)

Application Notes for MicroBlaze

Connecting to MicroBlaze Targets for Debug and Trace(app_microblaze.pdf)

Modifying Xilinx ML605 for Direct JTAG Access(app_ml605.pdf)

MIPS

MIPS Debugger and Trace(debugger_mips.pdf)

MSP430

MSP430 Debugger(debugger_msp430.pdf)

M-Core

M-Core Debugger(debugger_mcore.pdf)

NIOS

NIOS II Debugger and Trace(debugger_nios.pdf)

NIOS II Application Note

NIOS II Instantiating the Off-chip Trace Logic(app_nios.pdf)

PPC400/PPC440

PPC400/PPC440 Debugger and Trace(debugger_ppc400.pdf)

Application Note for PPC400/PPC440

Debugging Embedded Cores in Xilinx FPGAs [PPC4xx](app_xilinx_ppc400.pdf)

PQ/MPC500

MPC5xx/8xx Debugger and Trace(debugger_ppc.pdf)

MPC56x NEXUS Debugger and Trace(nexus_mpc5xx.pdf)

PQII, MPC5200, MPC603/7xx, MPC74xx

PPC600 Family Debugger(debugger_ppc600.pdf)

PQIII

PQIII Debugger(debugger_ppcpq3.pdf)

QorIQ

QorIQ Debugger and NEXUS Trace(debugger_ppcqoriq.pdf)

Qorivva MPC5xxx/SPC5xx

Qorivva MPC5xxx/SPC5xx Debugger and NEXUS Trace	(debugger_mpc5500.pdf)
Application Note for Nexus MPC5xxx	
Complex Trigger Unit for Nexus MPC5xxx	(app_ctu_mpc5xxx.pdf)
RH850	
RH850 Debugger and Trace	(debugger_rh850.pdf)
RH850 Application Notes	
Application Note Benchmark Counter RH850	(app_rh850_bmc.pdf)
RISC-V	
RISC-V Debugger	(debugger_riscv.pdf)
RX Debugger	
RX Debugger	(debugger_rx.pdf)
SDMA	
SDMA Debugger	(debugger_sdma.pdf)
StarCore	
StarCore Debugger and Trace	(debugger_starcore.pdf)
StarCore Application Note	
StarCore Application Note for MXC Chips	(starcore_mxc_app.pdf)
STM8	
STM8 Debugger	(debugger_stm8.pdf)
STRED	
STRED Debugger and Trace	(debugger_stred.pdf)
SuperH	
SH2, SH3 and SH4 Debugger	(debugger_sh4.pdf)
TI DSPs	
C2000 Debugger	(debugger_c2000.pdf)
C5000 Debugger	(debugger_c5500.pdf)
C6000 Debugger and Trace	(debugger_c6000.pdf)
C7000 Debugger and Trace	(debugger_c7000.pdf)
TriCore	
TriCore Debugger and Trace	(debugger_tricore.pdf)
MCDS User's Guide	(mcds_user.pdf)
TriCore Application Notes	
Application Note Debug Cable TriCore	(app_tricore_ocds.pdf)

Application Note FLASH Programming TriCore	(app_tricore_flash.pdf)
PCP Debugger Reference	(debugger_pcp.pdf)
Debugging via Infineon DAS Server	(backend_das.pdf)
V850	
V850 Debugger and Trace	(debugger_v850.pdf)
x86	
Intel® x86/x64 Debugger	(debugger_x86.pdf)
Tools for Intel® x86/x64	(tools_intel_x86.pdf)
Intel® Application Note for Server Setup	(app_x86_server.pdf)
Intel® Processor Trace	(trace_intel_pt.pdf)
XC800	
XC800 Debugger	(debugger_xc800.pdf)
XC800 Application Notes	
Application Note Debug Cable XC800	(xc800_app_ocds.pdf)
Xtensa	
Xtensa Debugger and Trace	(debugger_xtensa.pdf)
ZSP	
ZSP Debugger	(debugger_zsp.pdf)
IProbe	
IProbe User's Guide	(iprobe_user.pdf)
PowerIntegrator	
PowerIntegrator User's Guide	(powerintegrator_user.pdf)
PowerIntegrator Programming Guide	(powerintegrator_prog.pdf)
PowerIntegrator Application Notes	
PowerIntegrator State Trace Application Note	(powerintegrator_app_state.pdf)
PowerIntegrator Trace DisConfig Application Note	(powerintegrator_app_dc.pdf)
PowerIntegrator Setup Application Note	(powerintegrator_app_setup.pdf)
PowerProbe	
PowerProbe User's Guide	(powerprobe_user.pdf)
PowerProbe/Port Analyzer Reference Guide	(powerprobe_ref.pdf)
PowerProbe Trigger Unit Programming Guide	(powerprobe_prog.pdf)
Protocol Analyzer	
Protocol Analyzer Application Note	(protocol_app.pdf)

FlexRay Protocol Analyzer	(flexray_app.pdf)
LIN Bus Protocol Analyzer	(linbus_app.pdf)
EPROM/FLASH Simulator	(eprom_simulator.pdf)
Stimuli Generator	
Stimuli Generator User's Guide	(stg_user.pdf)
Stimuli Generator Reference Guide	(stg_ref.pdf)
Misc	
Error Messages	(error.pdf)
API for Remote Control and JTAG Access in C	(api_remote_c.pdf)
Controlling TRACE32 via Python 3	(app_python.pdf)
API for Auxiliary Processing Unit	(api_apu.pdf)
Command List	(commandlist.pdf)
TRACE32 Training	
Debugger Training	
Training Basic Debugging	(training_debugger.pdf)
Training Basic SMP Debugging	(training_debugger_smp.pdf)
Training Arm ETM	
Training Arm CoreSight ETM Tracing	(training_arm_etm.pdf)
Training Cortex-M Tracing	(training_cortexm_etm.pdf)
Training AURIX Tracing	
Training AURIX Tracing	(training_aurix_trace.pdf)
Training Hexagon ETM	
Training Hexagon ETM Tracing	(training_hexagon_etm.pdf)
Training Intel® x86/x64	
Training Basic SMP Debugging for Intel® x86/x64	(training_debugger_x86.pdf)
Training Linux Debugging for Intel® x86/x64	(training_rtos_linux_x86.pdf)
Training Intel® Processor Tracing	(training_ipt_trace.pdf)
Training Nexus	
Training Nexus Tracing	(training_nexus.pdf)
Training Source Level Debugging	(training_source_level_debugging.pdf)
Training Script Language PRACTICE	(training_practice.pdf)
Training Menu Programming	(training_menu.pdf)
Training RTOS	

Training Linux Debugging	(training_rtos_linux.pdf)
Training Power Probe	
Training Power Probe	(training_pp.pdf)
Training Simulator and Demo Software	(demo.pdf)
TRACE32 Installation	
TRACE32 Installation Guide	(installation.pdf)
Floating Licenses	(floatinglicenses.pdf)
TRACE32 Technical Support	
Legacy Release History	(release_legacy.pdf)
Software Updates	(updates.pdf)
TRACE32 Index	(index.pdf)
TRACE32 Directory	(directory.pdf)